



6 BUTTON REMOTE PAIRING

BOX AUGER CART REMOTE PAIRING

Step 1

TURN the Engine Key to OFF

Step 2

PRESS and **RELEASE** the **RED** Button

Step 3

PRESS the **RED** and **GREEN** Buttons until the LED Light Turns OFF

Step 4

RELEASE the **RED** and **GREEN** Buttons and the LED Light will begin flashing

Step 5

TURN the Engine Key to ON (NOT START)

Step 6

PRESS and **HOLD** the **GREEN** Button until the LED Light on the Remote **REMAINS** LIT

Congrats!

You have successfully paired your remote to the receiver!

